

Fusion System by EasyLog




EasyLog
Fusion



Quick Start Guide

What's in the box

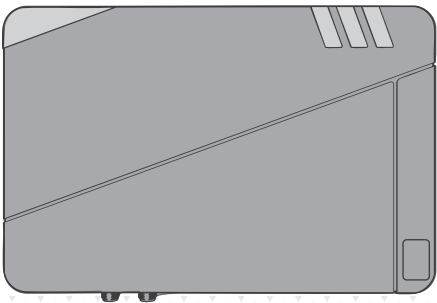

- 1 Gateway Communications Hub
- 2 Bluetooth Antenna
- 3 Cellular Antenna*

The Cellular Antenna is only supplied with the ELF-G-2 model.

You will also need Fusion Sensors



Fusion Wireless Sensor

A range of Fusion Sensors and external Smart probes are available to suit your differing monitoring needs.

EASYLOG Cloud

1 Get an EasyLog Cloud Account


Sign up for an EasyLog Cloud account at www.easylogcloud.com.

Install the EasyLog Cloud App from the **App Store** or **Google Play**.



2 Fit the Antennas

Your Gateway has been supplied with either one or two antennas. Both models include a Bluetooth antenna, model ELF-G-2 will also include a Cellular antenna.

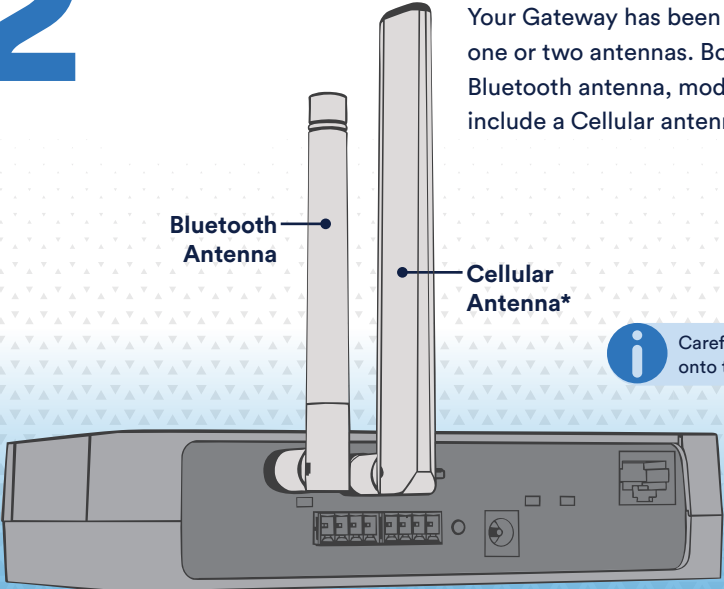


Carefully screw each antenna onto the correct connector.

*Model Dependent

3 Plug in the Ethernet cable and power supply

If your network provides Power Over Ethernet (POE) you don't need to use a separate 12V power supply.

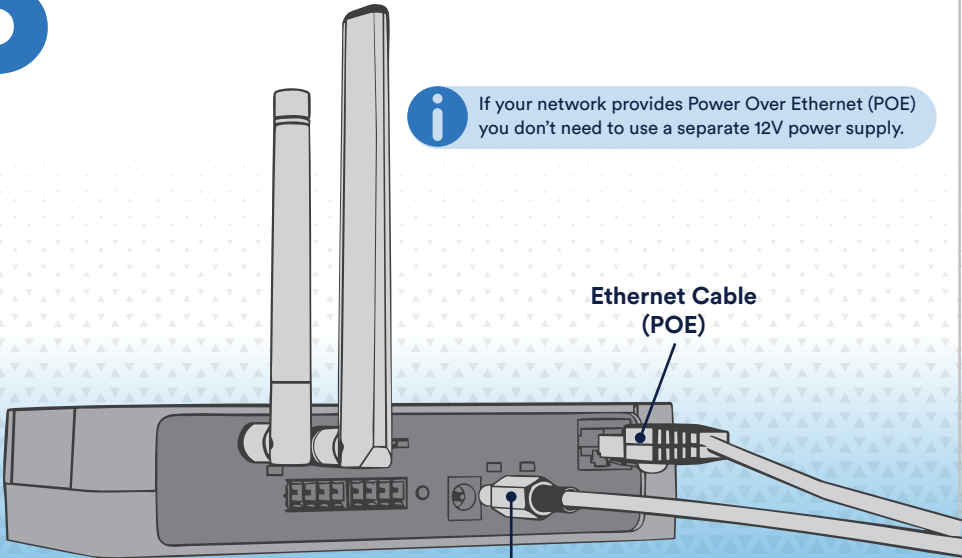

On Power Up

Complete configuration of the Gateway in the App.


In the App, select the burger menu, select Setup Device, then select Fusion Gateway. Follow the in-app instructions to connect your sensor.

Once connected, you can use the App and the EasyLog Cloud to view and update sensor settings.



Configure your Gateway

Once the Gateway is set up in the App, the lights will flash green.

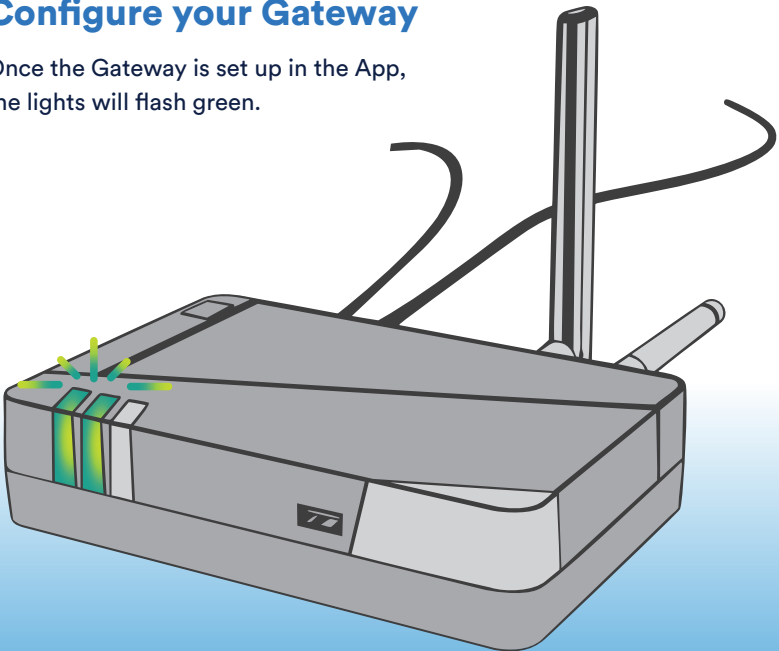

Pair a Fusion Wireless Sensor




1 Fit a Smart Probe

If you have one, if not the sensor will automatically use its internal temperature and humidity sensors.



2 Pair a Sensor to your Gateway

Pair one sensor at a time. Touch the top of the sensor to the gateway to begin pairing.

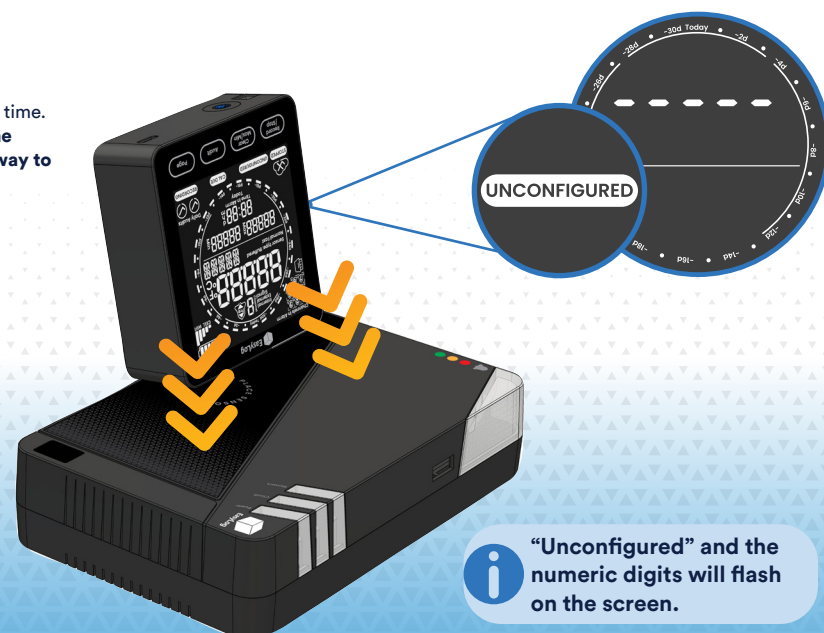

“Unconfigured” and the numeric digits will flash on the screen.

3 Pairing successful


The “sensor connected” LED on the Gateway will be green when paired successfully. The sensor will display “Recording”.

Repeat this process until all your sensors have been connected.



i If the Sensor is battery powered, then the lights will flash. If powered from an outlet, the lights will stay permanently on.

4 If Pairing is Unsuccessful

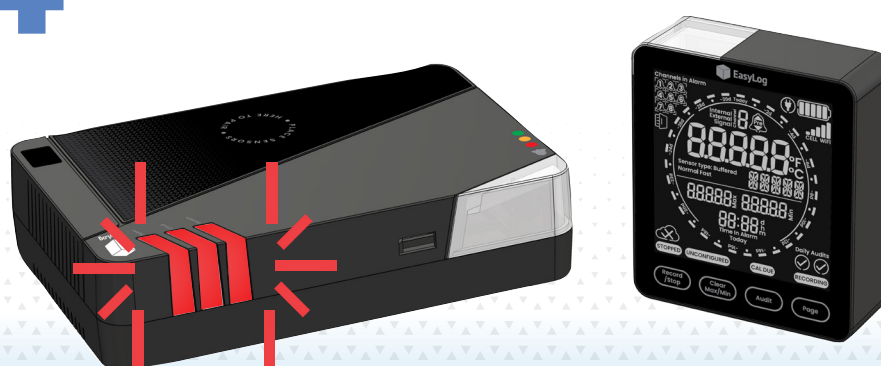

If unsuccessful the “Sensor Connected” LED will not illuminate. On the Gateway, hold the red reset button for 5 seconds and try pairing your sensor to the Gateway again.

IMPORTANT SAFETY INFORMATION

WARNING: Failure to follow these safety instructions could result in fire, electrical shock, other injury or damage.

Repairing or modifying

Never attempt to repair or modify this products. Dismantling these products, including the removal of external screws, may cause damage that is not covered under the warranty. Servicing should only be provided by the manufacturer. If the product has been submerged in water, punctured, or seriously damaged do not use it and return it to the manufacturer.

Using connectors and ports

Never force a connector into a port; check for obstruction in the port, make sure that the connector matches the port and that you have positioned the connector correctly in relation to the port. If the connector and port do not join with reasonable ease they probably do not match and should not be used.

Disposal and recycling

You must dispose of this products according to relevant laws and regulations. This products contains electronic components and therefore they must be disposed of separately from household waste.

Manufactured & Supplied by:
Lascar Electronics Ltd, Unit 6 Milford Trading Estate, Blakey Road, Salisbury SP1 2UD United Kingdom.

Lascar Electronics UK

T: +44 (0) 1794 884 567

E: sales@lascar.co.uk

Lascar Electronics US

T: +1 (814) 835-0621

E: sales@lascarelectronics.com

EasyLog
Fusion

lascarelectronics.com/fusion